



Fireplace Requirements

- Insert must be placed within a code-conforming masonry fireplace or tested and listed factory-built (metal) wood-burning fireplace. Repair any fireplace damage prior to installation.
- Because the insert uses a circulation blower, clean the fireplace, smoke shelf, and chimney prior to installation.
- This heater may be placed in a bedroom. Please be aware of the large amount of heat this appliance produces when determining a location.

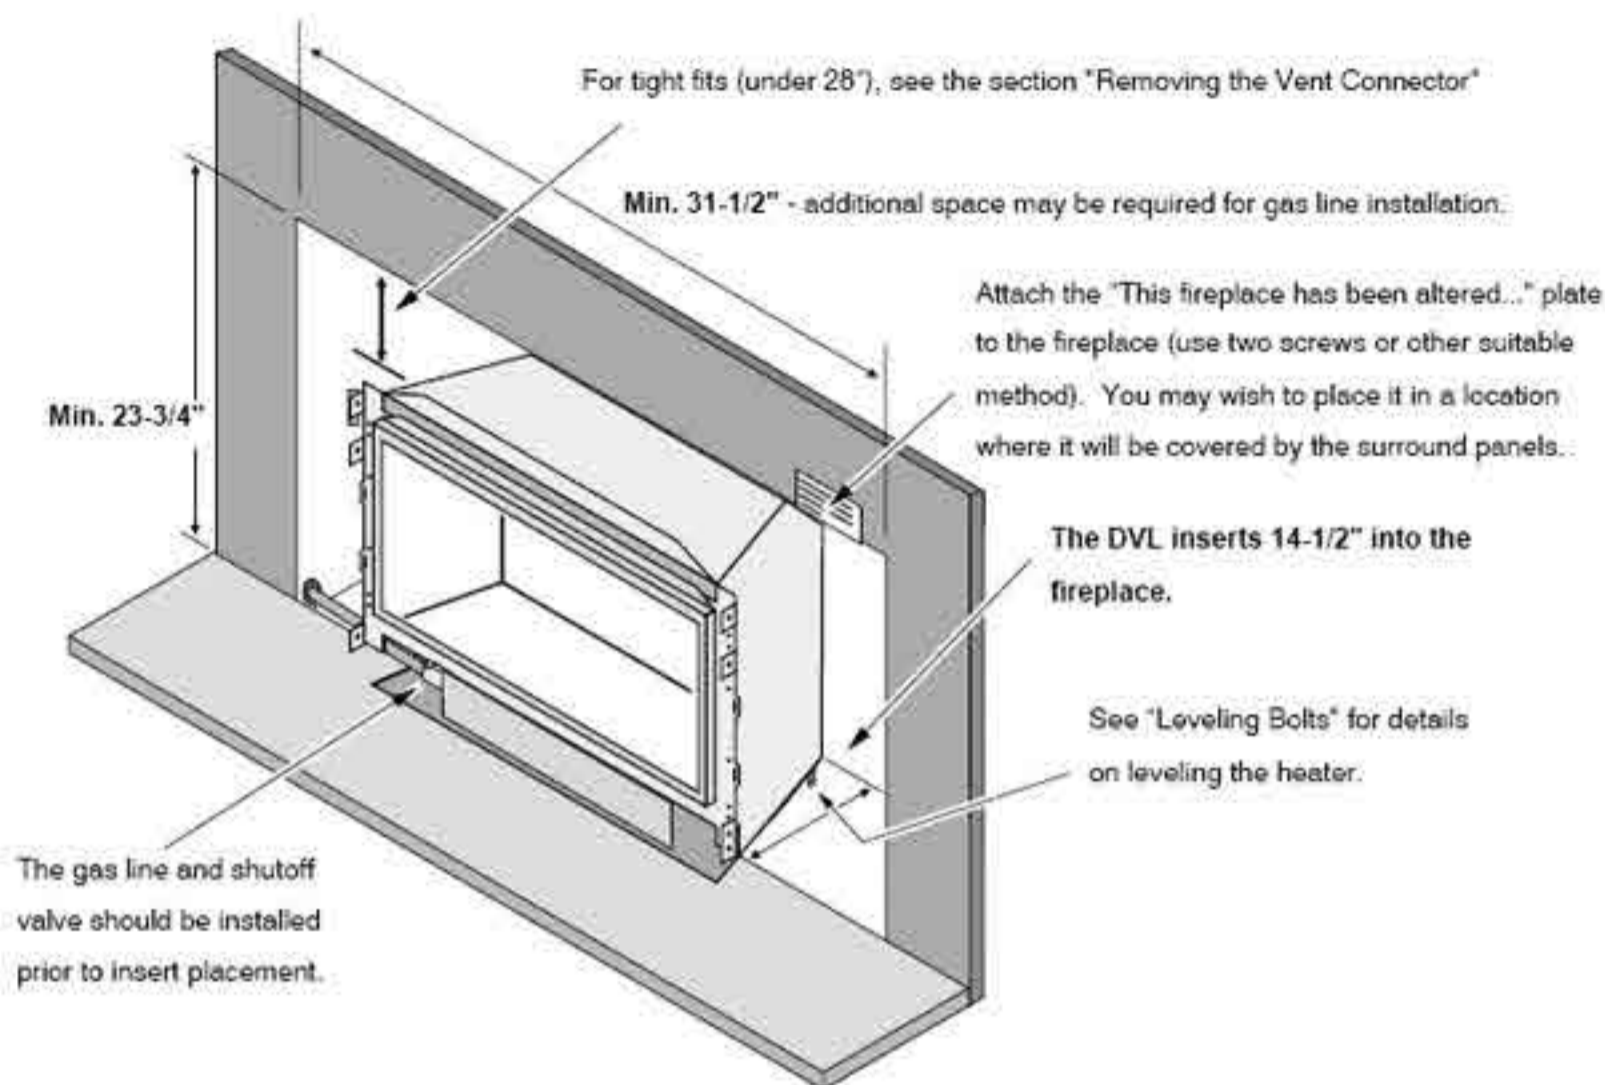

Clearances

Due to the high temperature of the heater, it should be located out of traffic and away from furniture and draperies.

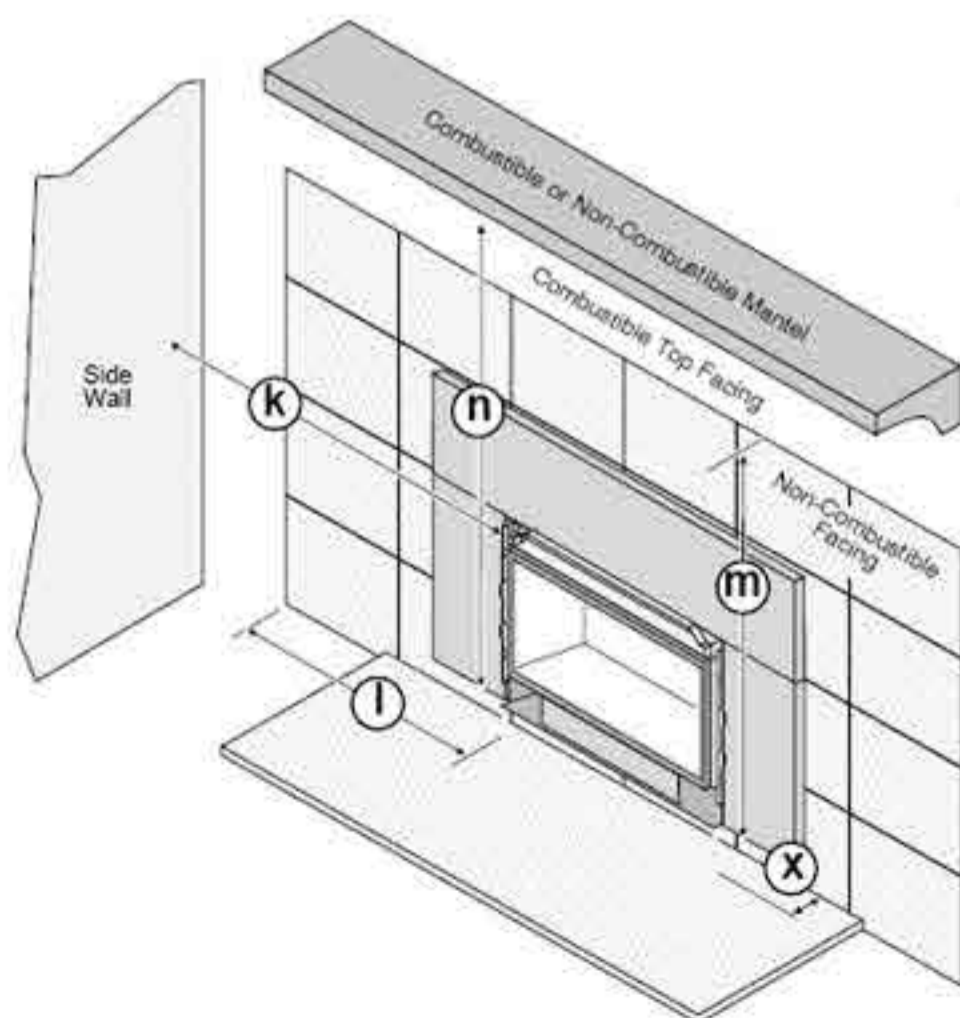

Minimum Clearances

k	Sidewall to Insert	4"
l	Side Facing	4"
m	Top Facing*	35-1/2***
n	Mantel*	35-1/2***
x	Extension onto Hearth	1-1/4"

* The non-combustible top facing must extend 35-1/2" above the base of the insert or to the bottom of the mantel (whichever is less).

** Measured from the base of the insert.